


## **CHAPTER 13: SPECIAL TOOL**

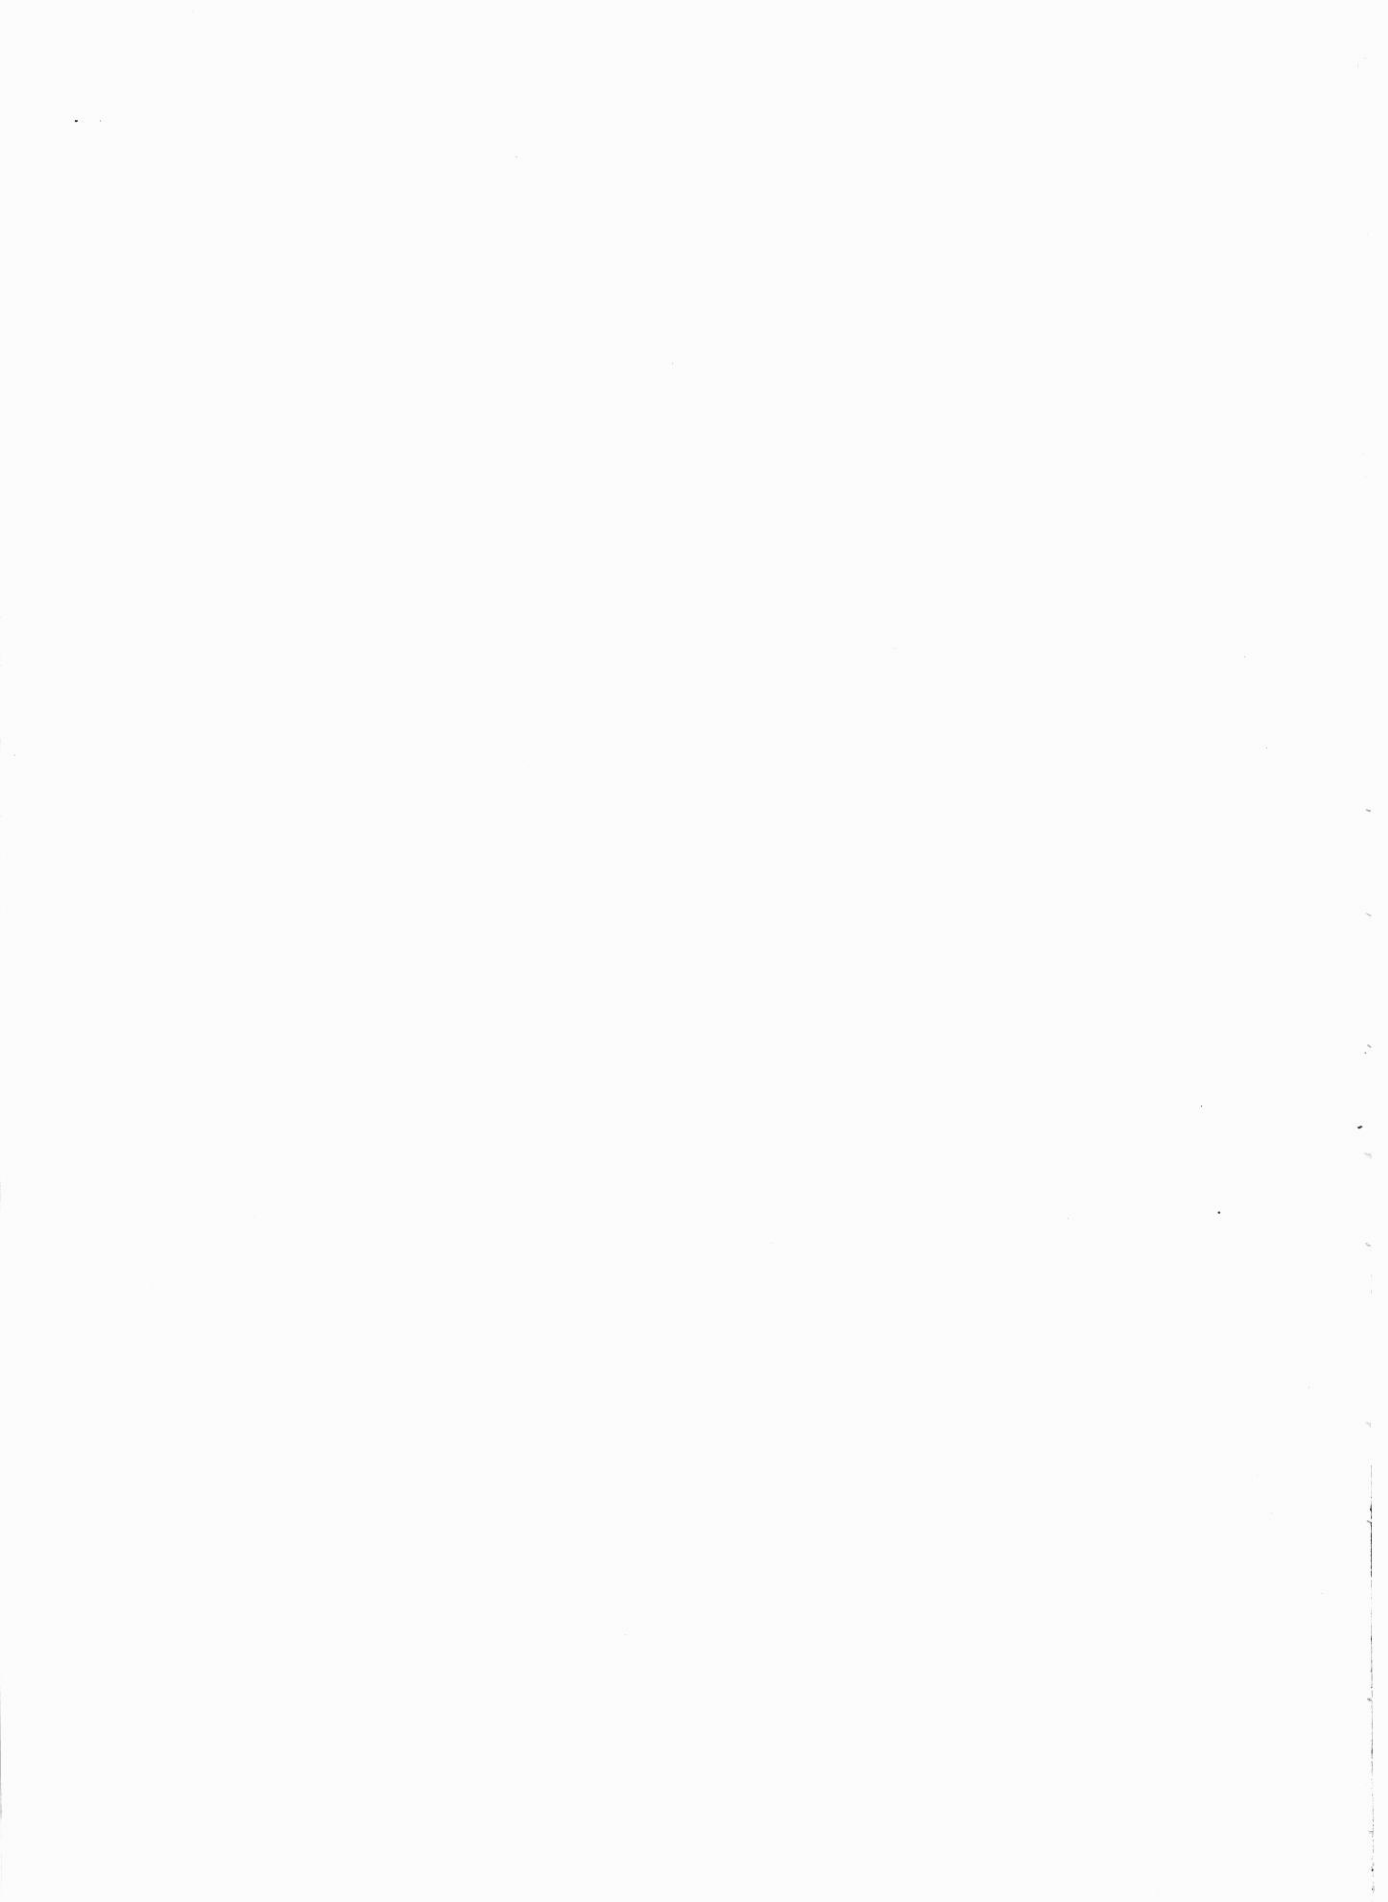


# CHAPTER 13: SPECIAL TOOL

## SPECIAL TOOL LIST


[ Body Section ]

	TOOL NO.	NOMENCLATURE	APPLICATION
1	921010000 (5E0136000)	REPLACING TOOL	Trailing arm bracket rubber bushing.

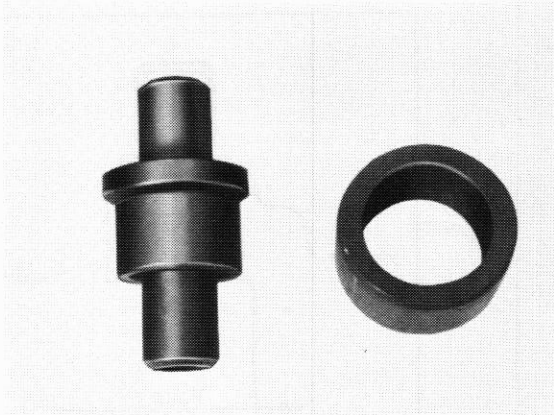

Extraction and Installation  
of trailing arm bracket  
rubber bushing.

	TOOL NO.	NOMENCLATURE	APPLICATION
2	921100000 (5E0133000)	INSTALLER	Trailing arm yoke nylon bushing.

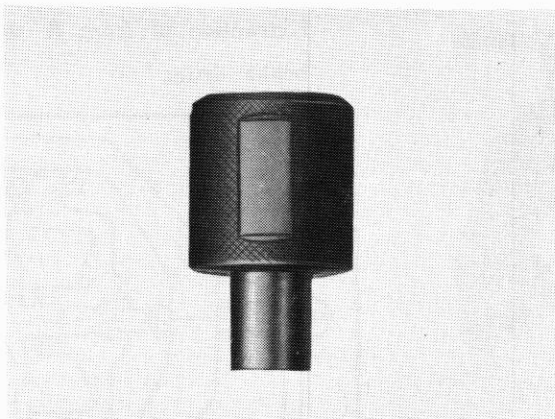


Installation of trailing arm  
yoke nylon bushing.


	TOOL NO.	NOMENCLATURE	APPLICATION
<b>3</b>	921110000 (1E1071001)	REMOVER	Trailing arm yoke nylon bushing.




Extraction of trailing arm yoke nylon bushing.

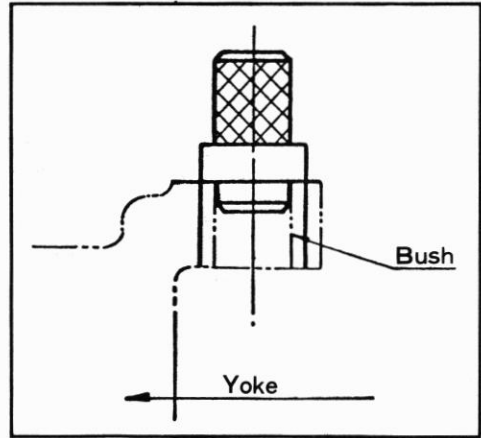


	TOOL NO.	NOMENCLATURE	APPLICATION
<b>4</b>	921120000 (1E2031002)	EXTRACTOR	Front & rear brake drum.

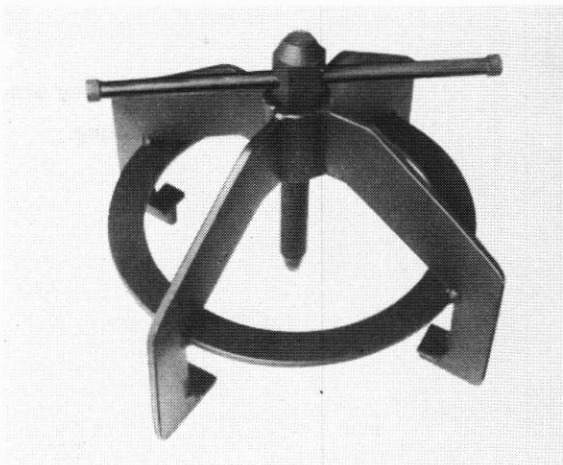


Extraction of front & rear brake drum.

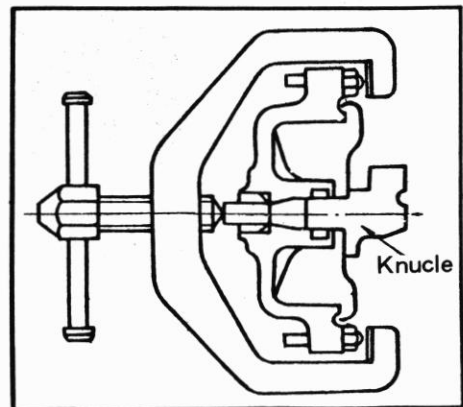


	TOOL NO.	NOMENCLATURE	APPLICATION
5	921130000 (5E0139000)	REPLACING TOOL	Front brake drum bearing.

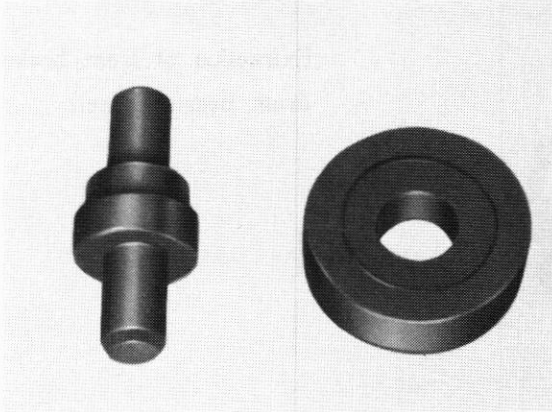

Installation of front & rear  
brake drum bearing.

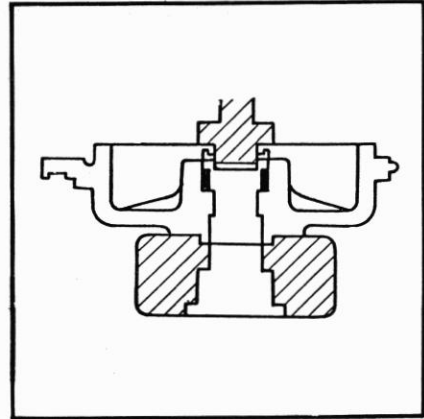


	TOOL NO.	NOMENCLATURE	APPLICATION
6	921140000 (5E0207000)	EXTRACTOR	King pin

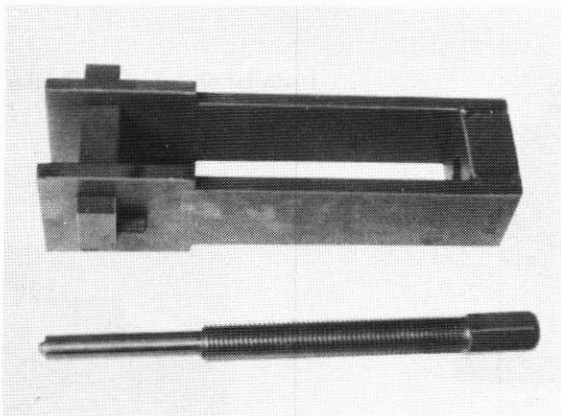


Extraction of king pin.

	TOOL NO.	NOMENCLATURE	APPLICATION
7	921150000 (1E2229001)	EXTRACTOR	Front brake drum bearing inner.

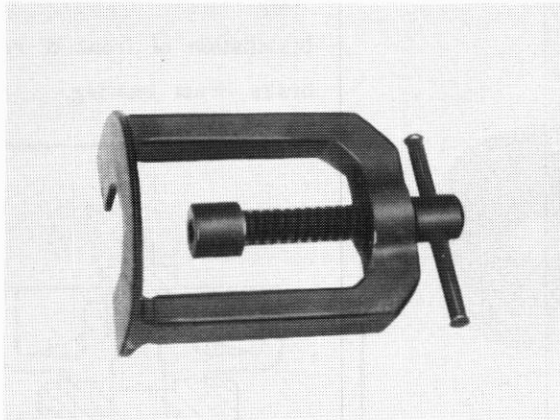

Extraction of front brake drum bearing inner.

	TOOL NO.	NOMENCLATURE	APPLICATION
8	921180000 (1E1072002)	INSTALLER	Rear brake drum & hub.

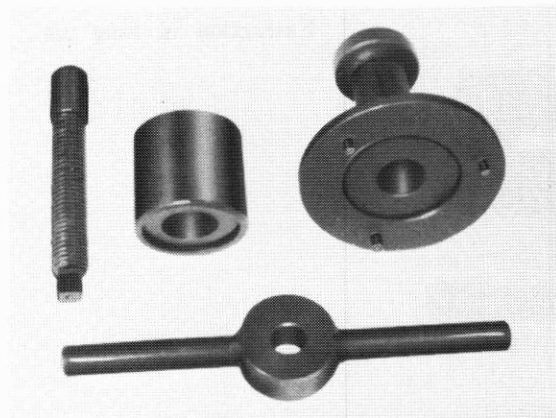

Installation of rear brake drum & hub.

